



## Walkway Cover Installation with Mechanical Fasteners

(See back for adhesive instructions)

### Walkway Cover Installation Over Grating

Install utilizing Universal Saddle Clip Assemblies with Slotted Truss Head Bolts, Nuts and Lock Washers (All Stainless Steel)

Saddle Clip Assembly →

Heel and toe pattern shown

### Walkway Cover Installation Over Diamond/Checker Plate

Adhesive can be used in lieu of or in conjunction with mechanical fasteners

a - Self-Tapping and Self-Drilling (Tek) Screws  
b - Rivets  
c - Low Profile Heads, Nuts, Lock Washers and bolts

### Walkway Cover Installation Over Concrete

Install using screws and masonry fasteners.

Adhesive can be used in lieu of or in conjunction with mechanical fasteners

Heel and toe pattern shown

### Walkway Cover Installation Over Wood

Install using 1 1/2" standard type screws.

Adhesive can be used in lieu of or in conjunction with mechanical fasteners

**NOTE:** 1/4" should be left between sheets to allow for expansion and contraction.

Please refer to the Installation Guidelines literature for detailed "step-by-step" written instructions.

**NOTE:** Please reference red "Attention" instructions on back of this page for air tool usage and instructions.

Safeguard recommends placing mechanical fasteners 1" x 1" in each corner of your Anti-Slip Cover with spacing 10" to 14" between each fastener.

\* The number of Saddle Clip Assemblies is directly influenced by the condition of the grating to be covered. New and good condition<sup>1</sup> grating may not require as many Saddle Clip Assemblies.

<sup>1</sup>Good condition is considered flat/level and non-corroded. Contact Safeguard to discuss your application.




# INSTALLATION DIAGRAMS


For Walkway Covers & PSA Material

## Walkway Cover Installation using adhesive

Minimum adhesive usage shown.  
Depending on condition of substrate,  
more can be applied or troweled.

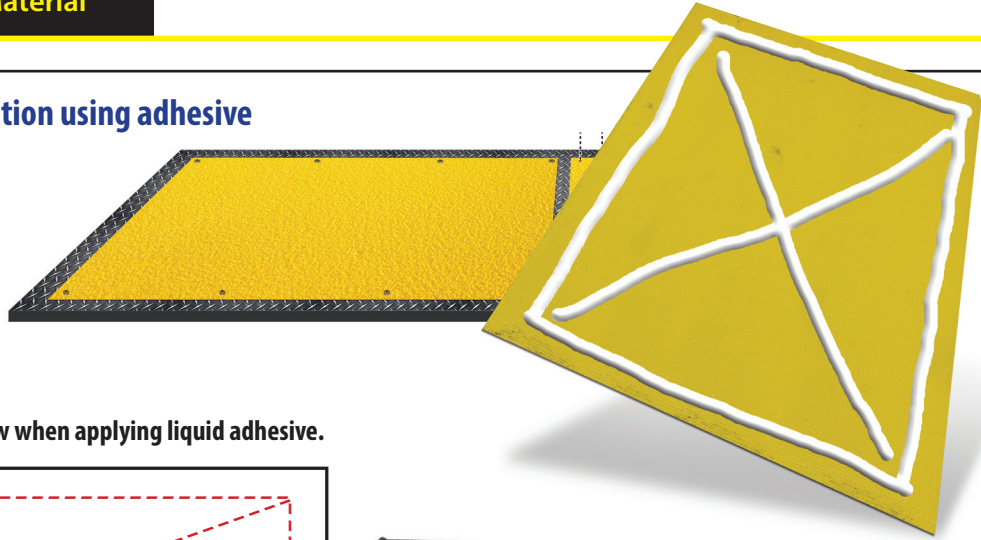


Red indicates pattern to follow when applying liquid adhesive.

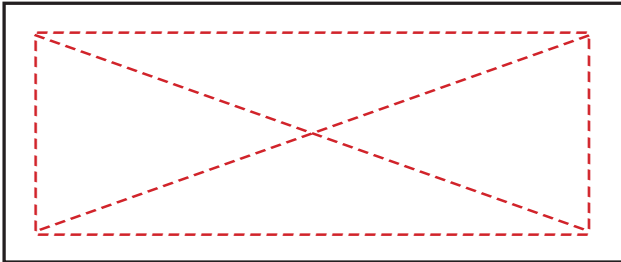


When using liquid adhesive, please refer to detailed installation and surface preparation instructions. Follow the pattern to the left for maximum adhesion when installing over diamond plate, concrete, and wood.

## Installation using Pressure Sensitive Adhesive (PSA)

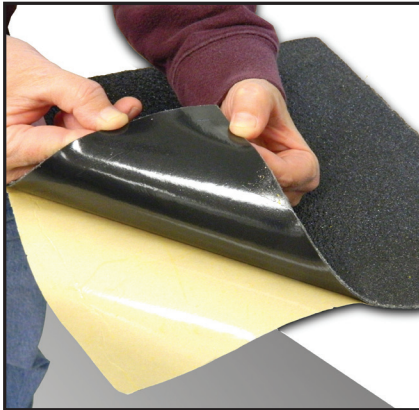

**Vinyl Walkway Cover with PSA**

Peel and release liner backing, then press firmly into place.

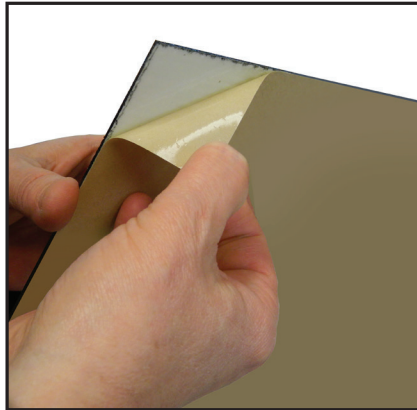

**1mm Fiberglass FRP with PSA**



**SAFEGUARD TECHNOLOGY INC.**

330.995.5200 | 800.989.1695 Toll-Free in the U.S. and Canada

Email: [info@safeguard-technology.com](mailto:info@safeguard-technology.com)

[www.safeguard-technology.com](http://www.safeguard-technology.com)

© Copyright 2016 SAFEGUARD TECHNOLOGY INC.  
SAFEGUARD® Covers, Hi-Traction®, HiGlo-Traction®, and  
Roll-Traction® are registered trademarks of SAFEGUARD  
Technology Inc. REV2\_122115